



Environmental Concerns during (Hot) Refueling Actions on the Airfield, Conn Barracks (Bks.)

I. Planning of (Hot) Refueling Exercises

1. After coordination with the Directorate of Plans, Training, Mobilization and Security (DPTMS) and/or Training Support Center (TSC), contact the USAG Schweinfurt Environmental Division (ED):
 - DSN 354-6795,
 - CIV 09721-96-6795.
2. The ED office is located at Bldg. 251, Ledward Bks. (DPW Compound), Franz-Schubert-Strasse 3, 97421 Schweinfurt.
3. Provide ED with a single Point of Contact (POC) who will be available for the entire duration of the field training. → **ED will provide an environmental briefing to this POC prior to the training exercise!**

II. During (Hot) Refueling Actions with Fuelers

1. Inform the Fire Department about the exercise.
2. Fuelers must be parked on the concrete area (green area on the attached map of the Conn Bks. Airfield), which is connected to oil-water separators. Black tar areas (yellow areas on the map) are not connected to oil-water separators!
3. Hoses must be located at least 1 meter from the edge of the concrete area!
4. Depressurized hoses when unattended.

III. Refueling of Generators and Other Equipment

1. Vehicles, generators, and radiators, etc. must ALWAYS be parked on the paved area or on absorbent mats while being operated and during refueling.
2. Fuel cans must be labeled (picture 1) and stored on the concrete area inside the storage container or on secondary containment (picture 2).





USAG Schweinfurt
DPW Environmental Division



Refueling Information Sheet
November 2012

IV. General Spill Prevention and Response Procedures

1. Prevent spills before they occur!
2. Have spill response equipment (e.g. spill kit [picture 4] or dry sweep and absorbent mats [picture 3], shovel, container for contaminated material, etc.) available where hazardous material (HM) is handled!
3. The Red Plan contains Spill Response Procedures!
4. **In the event of a spill, call the Fire Department at DSN 117!**



V. Water Protection Areas (WPAs)

1. Conn Bks. is partially located in a WPA.
2. Drinking water is extracted from five wells in this area.
3. One gallon of oil can contaminate one million gallons of drinking water!



VI. Waste Disposal


1. Organize disposal of hazardous wastes (HW, e.g. contaminated dry sweep or absorbent mats, Petroleum Oil and Lubricants [POL], JP8, etc.).
2. Properly dispose of HW at USAG Schweinfurt (see below) or the home Garrison of the unit.
3. The USAG Schweinfurt HW storage area (Bldg. 147, Conn Bks.) provides services on Tuesdays from 0900 to 1500 hrs or by appointment.
4. Contact ED for assistance with disposal of HW and any environmental concerns!
5. Solid, non-hazardous waste can be disposed of at the Conn Bks. Recycling Center, which is also located at Bldg. 147.



USAG Schweinfurt
DPW Environmental Division



Refueling Information Sheet
November 2012

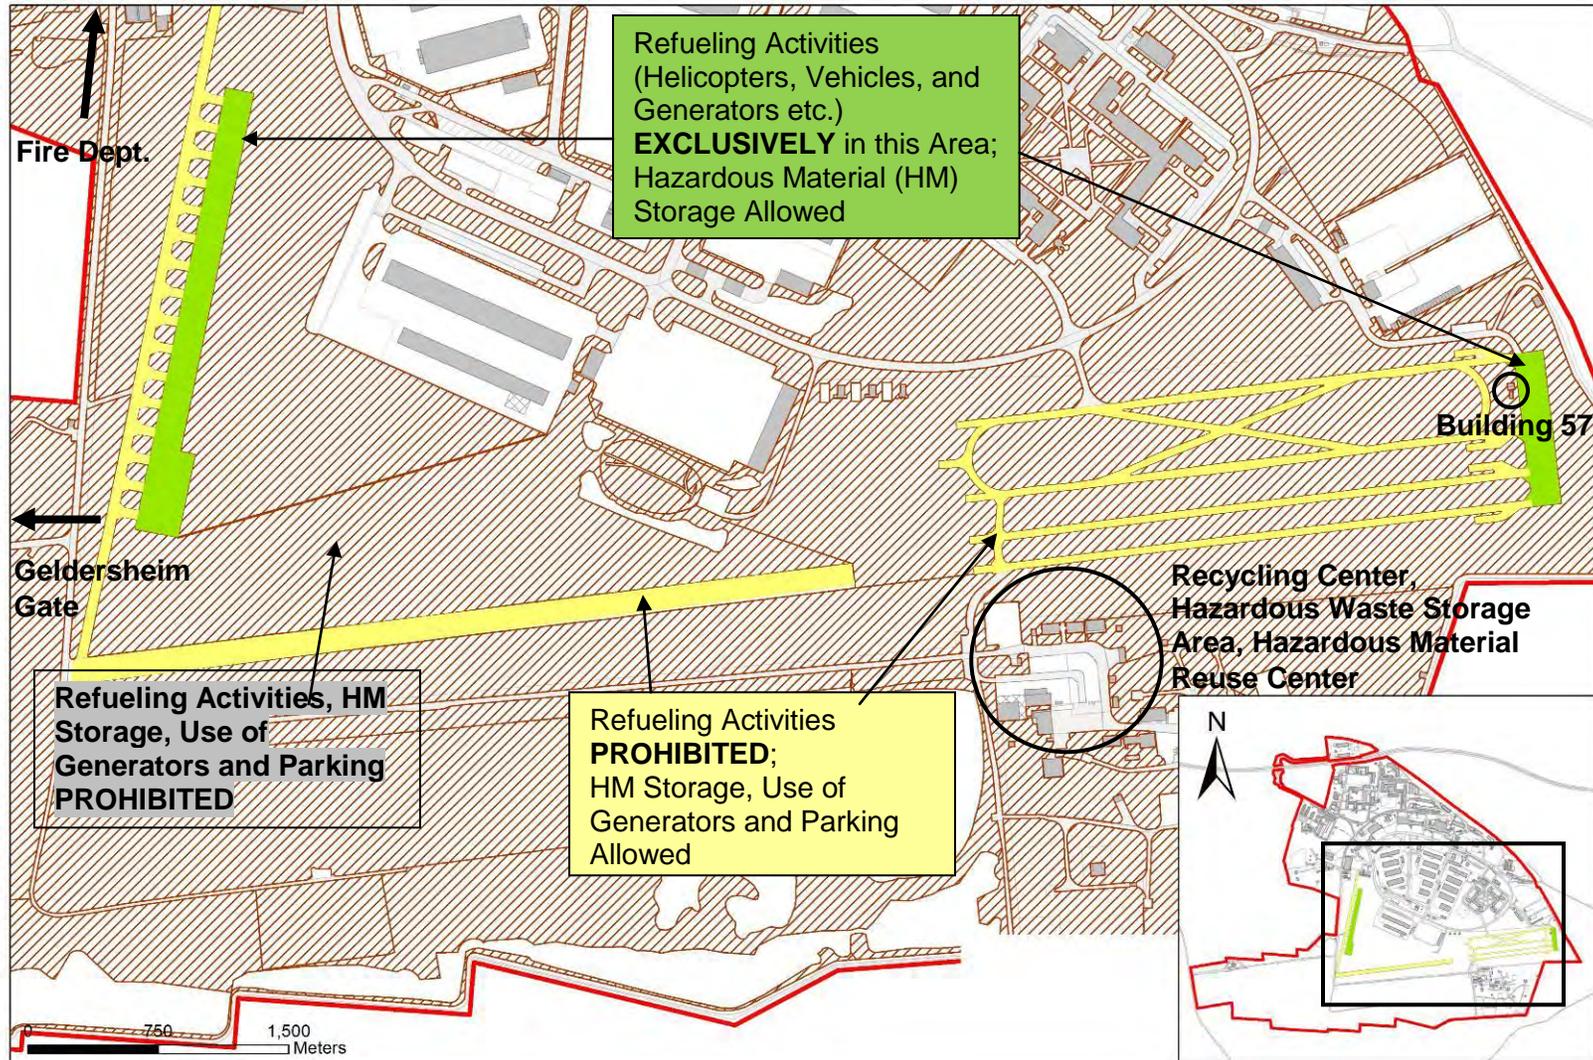

Map 1: Air Field and T/BCPC, Conn Bks., green area connected to oil-water separator